





# BM 25 & BM 25 Wireless

The BM 25 packs the benefits of a fixed system area monitor into a rugged, user-friendly and transportable instrument.

It was designed to detect one to five gases for mobile or temporary work applications, team protection, area surveillance, or places where fixed detection systems are not suitable.

- · Detect up to 5 gases simultaneously
- $\cdot$  103 dB at 3 feet audible alarm
- · Ultra-bright flashing signal at 360°
- · Run time of 170 hours
- · Resistant to harsh environment
- Easily transportable less than 15 lbS
- · 30 devices per network
- 16 independent networks
- · More than 0.5 mile RF line of sight
- · Data acquisition to a controller




Available as an option, the radio communication allows several BM 25 devices to communicate on the same network or to send information wirelessly to a controller.

#### A scalable network


Adding a BM 25 on an existing network has never been so easy as you just need to turn it on. The BM 25 is automatically added on the network

- Up to 30 BM 25 can be meshed on the same network
- Up to 16 networks can coexist with no interference

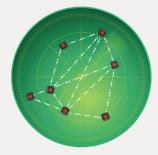

#### Alarm Transfer

If a BM 25 goes into gas alarm, all BM25s in the network will report a corresponding alarm.

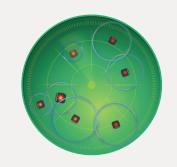

#### Safety Function Remains

If a BM 25 does not respond or if the network is split, then it is possible to continue to work by the time of the restoration of the network. The gas detection remains effective and each BM 25 would still locally alarm in the presence of gas.



#### **Network Self-Healing**

When the obstacle is gone, the communication resumes automatically. The two groups merge together to form only one group again.



### How does the MESH network, work?

- · Hosts are connected peer-to-peer manner, forming a net-like structure
- No central hierarchy
- · Each node can receive, send and relay data
- · If a node is down, it goes through another route
- · Maximum distance between two communicating devices is 0.6 mile line of sight

# Benefits of Mesh Topology:

- · Fast and simple deployment
- · High coverage versatility
- · High fault tolerance
- · Significantly reduces installation and network operating costs


# Alarm & Datalogging Capabilities:

- · 360° flashing sign<sup>a</sup>l
- · 103 dB at 3 feet audible alarm.
- · STEL and TWA values are available
- · Datalogging capacity of more than four months (for 5 gases configuration).

.

## Batteries

- · Provide up to 170 hours of continuous runtime
- Full recharge in only 4 1/2 hours
- · Safe trickle charger for long-term monitoring in classified zones.

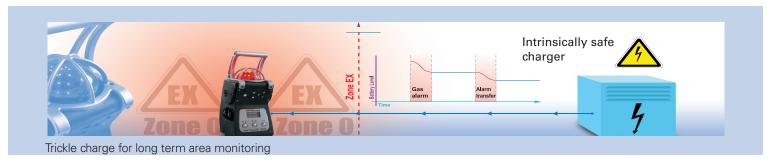




### Smartwireless HMI

BM 25s send fault status, alarm status and gas measurements to the controller. As soon as one BM 25 fires an alarm, the controller relays the information to all BM 25s on the same network that then turn in Alarm Transfer mode.

#### MX40 Controller

The SmartWireless® MX 40 Controller provides operator interface to the network and real time status display of all network devices. Flexible and expandable, a MX 40 network consists of any combination of (up to 16) BM 25 wireless and/or (up to 32) wireless and/or wired sensors, one or more control panels, and alarm warning devices. Command functions include alarm reset, alarm acknowledge, alarm test and radio silence. The control panel displays real time gas concentrations, field device status, battery levels, network RF signal quality and fault diagnostic conditions. Display indications include alarm status, channel, gas reading, battery life & link signal strength. Standard features include removable SD card with datalogging.


The Model MX 40 also allows for expanded use of Oldham addressable I/O modules that include a 4-channel 4-20mA input module (DA-4), a 4-alarm relay output module (RL-4), a 4-channel 4-20mA output module (AO-4), and a 4-relay contact input module (DI-4). Oldham modules can be mounted within the main system enclosure or installed remotely to simplify field wiring.

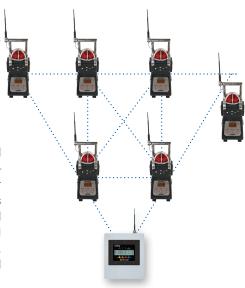

### Sitewatch Remote Monitor

SiteWatch is an advanced networking device that provides remote access to any Oldham gas detection system via Ethernet or cellular communication. The SiteWatch Ethernet version provides an IP addressed web page that can be accessed via any web browser and both the Ethernet and Cellular versions provide automated emails for all alarm and fault conditions instantaneously. SiteWatch technology can be embedded into the Oldham or Detcon Model MX 40 and MCX-32 wireless controllers.

The SiteWatch allows web browser access to real time data from the gas detection system that includes: detector type, location/name, gas concentration, gas type and alarm status. In addition, when used with Detcon SmartWireless systems, the data includes battery life and link quality of all devices in the network.

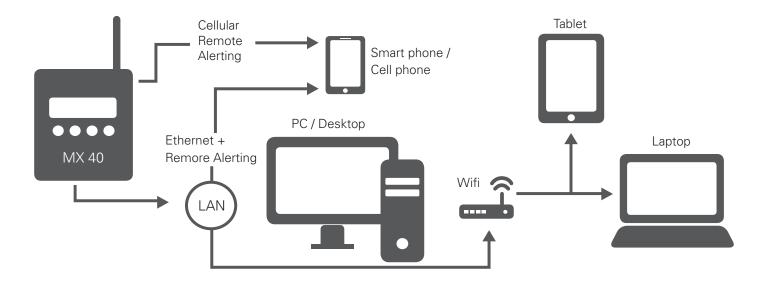



**CERTIFICATIONS** 

TECHNICAL SPECIF	ICATION	
Instrument Warranty::	Two-year warranty, excluding c	onsumables (sensors, filters, etc.)
Case Material:	IP66 - Impact resistant polycarbonate	
Dimensions:	470 x 180 x 190 mm (16.7" x 7.1" x 7.5")	
Weight:	6.8 kg (15 lbs)	
Display:	Graphic liquid crystal display with backlight	
Sensors:	Combustible Gas – Catalytic Diffusion Methane, Propane, Butane, Isobutane, LPG, Ethanol, Pentane – Infrared Oxygen and Toxic Gases – Electrochemical CO2 – Infrared Isobutylene – PID	
Measuring ranges:	Combustible Gases: Methane: Methane: Methane: Propane: Butane: Isobutane: LPG: Ethanol: Pentane: Oxygen: Carbon Monoxide: Hydrogen Sulfide: Hydrogen: Sulfur Dioxide: Chlorine: Nitric Oxide: Hydrogen Cyanide: Hydrogen Cyanide: Ammonia: Phosphine: Arsine: Silane: Ethylene Oxide: Carbon Dioxide: Isobutylene: Fluorhydric Acid: Ozone: Phospene: Chlorine Dioxide: Hydrazine:	0-100% LEL in 1% increments 0-100% LEL in 1% increments – Infrared 0-100% of volume in 1% increments – Infrared 0-100% LEL in 1% increments 0-1000 ppm in 1 ppm increments 0-1,000 ppm in 1 ppm increments 0-2,000 ppm in 1 ppm increments 0-30 ppm in 0.1 ppm increments 0-10 ppm in 0.01 ppm increments 0-10 ppm in 0.01 ppm increments 0-10 ppm in 0.01 ppm increments 0-10 ppm in 0.1 ppm increments 0-10 ppm 0.1 ppm increments
WIRELESS NETWORK:	» 2.4 GHz - 100 mW - IEEE 802.15.4  » 30 devices per network  » 16 independent networks  » Communication distance : 0.6 mile line of sight	
MX 40:	Up to 32 Devices, Wired or Wireless Up to 16 BM 25 NEMA4X Package Configurable up to eight zones Alarm and Fault Condition LEDs Display Indicates: Field Device Location, Alarm Status, Channel, Gas Reading, Battery Life & Signal Strength	
Datalogging Capacity:	200,000 measurements	
Audible Alarm:	103 dB @ 1 meter	
Visual Alarm:	Ultrabright LED beacon visible	360 degrees
Operating Temperature Range:	-20°C to +50°C (-4°F to 122°	F) sensor dependent
Operating Humidity Range:	1% to 99% RH sensor depende	ent
Power Source (Run Time)	NiMH (up to 170 hours operating time, 135 hours in wireless mode)	
	4.5 hours, typical	

ATEX & IECEx VERSIONS BM 25 (standard version)	
Without IR sensor:	II 1G / I M 1 Ex ia IIC T4 Ga / Ex ia I Ma
With IR sensor:	II 2G / I M2
DM 05 W	Ex ia d IIC T4 Gb / Ex ia d I Mb
BM 25 W (wireless version) Without IR sensor:	II 1G / I M 1 Ex ia IIB T4 Ga / Ex ia I Ma
	or
	II 2G / I M2 Ex ia IIC T4 Gb / Ex ia I Mb
With IR sensor	II 2G / I M2 Ex ia d IIC T4 Gb / Ex ia d I Mb
CSA VERSION	,
BM 25 (standard and wireless versions)	Ex d ia IICT4 Class I, Div 1, Gr ABCD (for Canada Only) Class I, Div 2, Gr ABCD (for US Only)
	AEx d ia IIC T4 Class I, Zone 1 (for US Only)
ISA-12.13.01-2000	
	D sensor or infrared sensor for at CSA certified.
BM25 with pump or PIE combustible gases is no	
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version)	ex ia I Ma Ex ia II C T4 Ga IP66
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR: With sensor IR:	Ex ia I Ma Ex ia IICT4 Ga IP66 -20 °C \le Ta \le +55 °C  Ex d ia IICT4 Gb IP66 -20 °C \le Ta \le +55 °C  Ex ia I Mb  Ex d ia IICT4 Gb IP66 -20 °C \le Ta \le +55 °C
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR: With sensor IR:	Ex ia I Ma Ex ia ICT4 Ga IP66 -20 °C ≤ Ta ≤ +55 °C  Ex d ia IMb Ex d ia IICT4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex ia I Mb Ex d ia IICT4 Gb Ex ia I Mb Ex ia I Mb Ex ia I Mb
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR: With sensor IR:	Ex ia I Ma Ex ia ICT4 Ga IP66 -20 °C ≤ Ta ≤ +55 °C  Ex d ia I Mb Ex d ia IICT4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex ia I Mb Ex d ia IICT4 Gb
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR: With sensor IR:	Ex ia I Ma Ex ia II CT4 Ga IP66 -20 °C ≤ Ta ≤ +55 °C  Ex d ia IMb Ex d ia IIC T4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex ia I Mb Ex ia IIC T4 Gb Ex
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR:  With sensor IR:  BM 25 W (wireless version) Without sensor IR:	Exia I Ma Exia I Ma Exia IIC T4 Ga IP66 -20 °C ≤ Ta ≤ +55 °C  Ex d ia I Mb Ex d ia IIC T4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex ia I Mb Ex ia IIC T4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex db ia I Mb Ex db ia I Mb Ex db ia I IC T4 Gb IP66
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR:  With sensor IR:  BM 25 W (wireless version) Without sensor IR:	Ex ia I Ma Ex ia IICT4 Ga IIP66 -20 °C ≤ Ta ≤ +55 °C  Ex d ia I Mb Ex d ia IICT4 Gb IIP66 -20 °C ≤ Ta ≤ +55 °C  Ex ia I Mb Ex ia IICT4 Gb Ex ia IICT4 Gb Ex ia IIB T4 Ga IIP66 -20 °C ≤ Ta ≤ +55 °C  Ex db ia I Mb Ex db ia I Mb Ex db ia I Mb
BM25 with pump or PIE combustible gases is no INMETRO VERSION BM 25 (standard version) Without sensor IR:  With sensor IR:  BM 25 W (wireless version) Without sensor IR:  With sensor IR:	Exia I Ma Exia I Ma Exia IIC T4 Ga IP66 -20 °C ≤ Ta ≤ +55 °C  Ex d ia I Mb Ex d ia IIC T4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex ia I Mb Ex ia IIC T4 Gb IP66 -20 °C ≤ Ta ≤ +55 °C  Ex db ia I Mb Ex db ia I Mb Ex db ia I IC T4 Gb IP66

As an ISO 9001 & ISO 14001 approved company, OLDHAM quality assurance programmes demand the continuous assessment and improvement of all OLDHAM products. Information in this leaflet could thus change without notification and does not constitute a product specification. Please contact OLDHAM or their representative if you require more details

Tel: +33 (0) 3 21 60 80 80 Fax: +33 (0) 3 21 60 80 00 info-emea@tyco.com

**AMERICAS** 

Tel: +1 713-559-9200 Fax: +1 281-292-2860 sh-sale@tycoint.com

Tel: +86 21 3127 6373 Fax: +68 21 3127 6365 contact@scottsafety.cn



www.TycoGFD.com / Copyright © 2017 Tyco Gas and Flame Detection. / All rights reserved. / GF-30035G











