Series 3730

Type 3730-0 Electropneumatic Positioner



Application

Single-acting or double-acting positioner for attachment to pneumatic control valves

 Set point
 4 to 20 mA

 Travel
 5.3 to 200 mm



The positioner ensures a predetermined assignment of the valve position (controlled variable x) to the input signal (set point w). It compares the input signal received from a control system to the travel of the control valve and issues a corresponding output signal pressure (output variable y).

Special features

- Simple attachment to common linear actuators with interface for SAMSON direct attachment, NAMUR rib, valves with rod-type yokes according to IEC 60534-6 (Fig. 1) and attachment according to VDI/VDE 3847
- Any desired mounting position of the positioner
- Calibrated travel sensor without gears susceptible to wear
- Analog pneumatic output prevents pulsing in case of leaking actuator
- Fast-reacting analog control loop
- High control accuracy (fine tuning) without dead band and continuous pneumatic output
- Two-wire system with small electrical load below 300 Ω for explosion-protected version and version without explosion protection
- Output pressure limitation enabled by DIP switch
- Selectable tight-closing function with fixed switching point
- Low air consumption of approx. 110 l_n/h independent of supply and output pressure
- Aluminum housing with IP 66 degree of protection
- Check valve in the exhaust air port
- Resistant to shock and vibrations
- Extended temperature range also for intrinsically safe operation
- Travel range selectable within the rated travel range by setting DIP switch
- Zero and span adjusted by potentiometers
- Set point range and direction of action adjustable by setting DIP switches, e.g. for split-range operation

Additional options

Stainless steel housing



Principle of operation

The positioner is mounted on pneumatic control valves and is used to assign the valve position (controlled variable x) to the control signal (set point w). The positioner compares the electric control signal of a control system to the travel of the control valve and issues a signal pressure (output variable y) for the pneumatic actuator.

The positioner consists of a travel sensor system proportional to resistance, an analog i/p converter with a downstream air capacity booster and the electronics with microcontroller.

The position of the valve stem is transmitted as a linear travel motion over the pick-up lever to the travel sensor (2) and supplied to an analog PD controller (3). The PD controller compares this actual value to the DC control signal coming from the control system, e.g. a 4 to 20 mA signal. In case of a system deviation, the activation of the i/p converter (6) is changed so that the actuator of the control valve (1) is pressurized or vented accordingly over the downstream booster (7).

This causes the valve plug to move to the position determined by the set point.

The supply air is supplied to the booster and the pressure regulator (8). An intermediate flow regulator (9) with fixed settings is used to purge the positioner and, at the same time, guarantees trouble-free operation of the booster.

The output signal pressure supplied by the booster can be limited by enabling the DIP switch setting S5 (4).

The volume restriction (10) and the DIP switch S6 (4) are used to optimize the positioner by adapting it to the actuator size and changing the gain factor.

Operation

The user can adjust the potentiometers and DIP switches to change the positioner settings. The configuration of the positioner is facilitated by instructions included on the inside of the cover which are intended to ensure a quick and trouble-free adaptation of the positioner to the control valve.

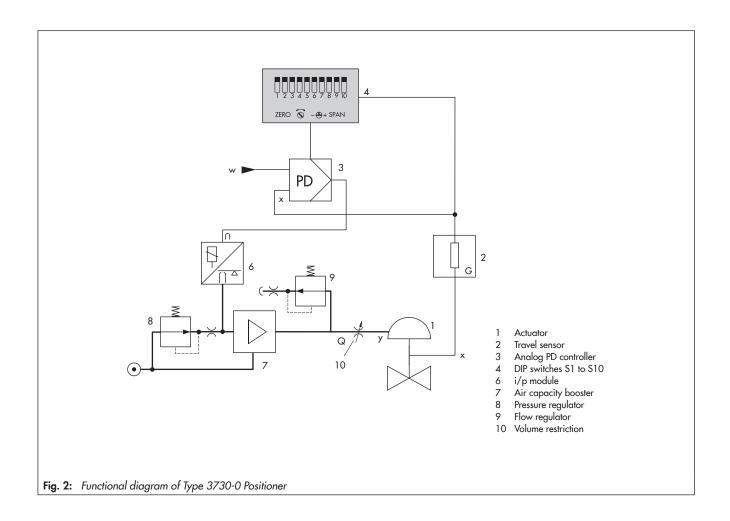


Table 1: Technical data

Type 3730-0 Position	oner (technical data in tes	t certificates additionally apply to explosion-protect	red devices)								
		Direct attachment to Type 3277 Actuator	5.3 to 30 mm								
Travel	Adjustable	Attachment to Type 3510 Micro-flow Valve	5.3 to 15 mm								
		Attachment according to IEC 60534-6 (NAMUR) 5.3 to 200 mm									
Travel range		Adjustable within the initialized travel/angle of rotation; travel can be restricted to 1/5 at the maximum									
Set point w	Signal range	4 to 20 mA, 4 to 12 mA and 12 to 20 mA Setting with DIP switches S6 and S7									
•	Static destruction limit	100 mA									
Minimum current		3.6 mA									
Load impedance		≤ 6 V (corresponding to 300 Ω at 20 mA)									
	Supply air	1.4 to 7 bar (20 to 105 psi)									
Supply air Air quality acc. to ISO 8573-1 (edition 2001-02) Max. particle size and density: Class 4 · Oil content: Class 3 · Pressure dew point: Class 10 K below the lowest ambient temperature to be expected											
Signal pressure (output)		0 bar up to the capacity of the supply pressure Limitation to approx. 2.4 bar enabled by setting DIP switch S5									
Characteristic		Linear · Deviation ≤1 %									
Hysteresis		≤1 %									
Sensitivity		≤0.1 %									
Direction of action		Adjustable by changing DIP switch S4 setting									
Air consumption		Independent of supply air approx. 110 l _n /h at a supply pressure of 4 bar									
Air output capacity Actuator filled with air Actuator vented		At $\Delta p = 6$ bar: $8.5 \text{ m}_n^3 / h$ · At $\Delta p = 1.4$ bar: $3.0 \text{ m}_n^3 / h$ · $K_{Vmax(20 ^{\circ}C)} = 0.09$									
		At $\Delta p = 6$ bar: 14.0 m _n ³ /h · At $\Delta p = 1.5$ bar: 4	$4.5 \text{m}_{\text{n}}^{3}/\text{h} \cdot \text{KV}_{\text{max}(20 ^{\circ}\text{C})} = 0.15$								
Permissible ambient temperature		–20 to 80 °C · −45 to 80 °C with metal cable glan. The limits in the test certificate additionally apply fo									
Temperature		≤0.15 %/10 K									
Influences	Supply air	None									
	Effect of vibration	≤0.25 % up to 2000 Hz and 4 g according to IEC	770								
Electromagnetic compatibility		Complying with EN 61000-6-2, EN 61000-6-3, EN 61326-1 and NAMUR Recommendation NE 21									
Electrical connections		One M20 x 1.5 cable gland for 6 to 12 mm clamping range \cdot Second M20 x 1.5 threaded conection additionally exists \cdot Screw terminals for 0.2 to 2.5 mm ² wire cross-sections									
Explosion protection	1	See Table 2									
Degree of protection	1	IP 66/NEMA 4X									
Use in safety-instrumented systems (SIL)		Observing the requirements of IEC 61508, the systematic capability of the pilot valve for emergency venting as a component in safety-instrumented systems is given.									
		Use is possible on observing the requirements of IEC 61511 and the required hardware fault toll erance in safety-instrumented systems up to SIL 2 (single device/HFT = 0) and SIL 3 (redundant configuration/HFT = 1).									
Weight		1.0 kg									
	Housing	Die-cast aluminum EN AC-AlSi12(Fe) (EN AC-443 powder coated · Special version: stainless steel 1.4									
Materials	External parts	Stainless steel 1.4404/316L									
	Cable gland	M20x1.5, black polyamide									

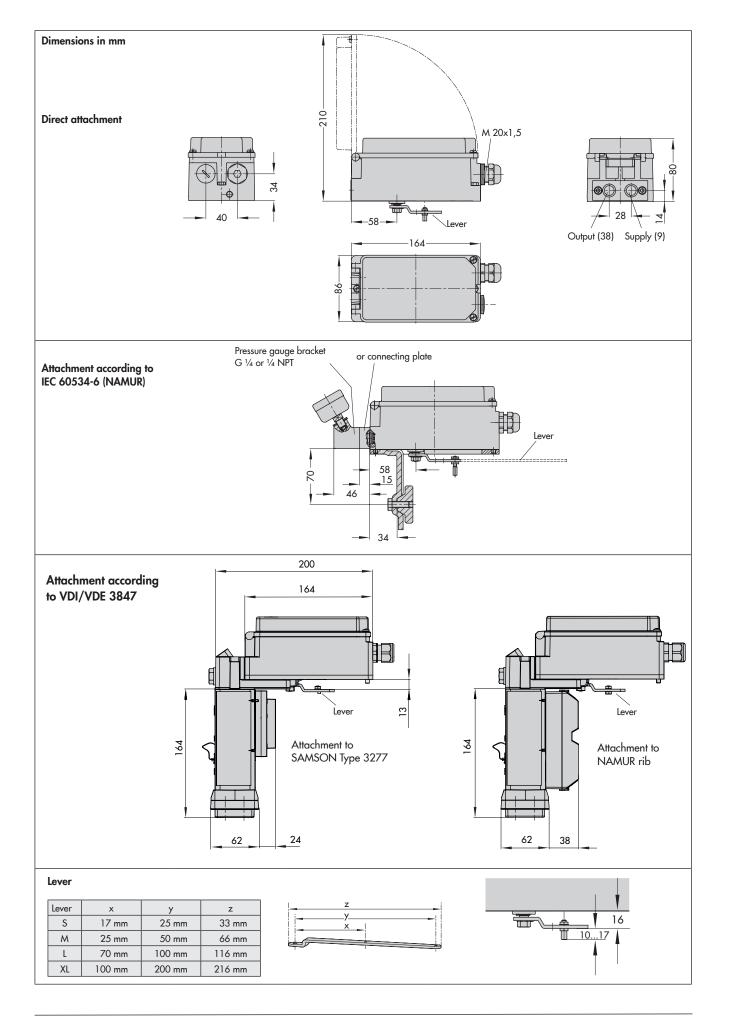


Table 2: Explosion protection certificates

Тур	е	Certification			Type of protection/comments
	0-	STCC	Number Valid until	972 2017-10-01	OEx ia IIC T6X 2Ex s II T6 X
		EX EC type examin	nation Number Date	PTB 03.ATEX 2099 2016-04-19	II 2G Ex ia IIC T6 Gb II 2D Ex ia IIIC T80°C Db
	-01	ERE Ex	Number Date Valid until	RU C-DE.08.B.00113 2013-11-15 2018-11-14	1Ex ia IIC T6/T5/T4 Gb X Ex tb IIIC T80°C Db X
	CSA 03.30 FM	CSA	Number Date	1613095 2005-02-11	Ex ia IIC T6; Class I, Zone 0; Class II, Groups E, F, G Ex nA II T6; Class I, Zone 2; Class II, Div. 2, Groups E, F, G
3730		FM	Number Date	3021 <i>5</i> 79 2004-12-01	Class I, Zone O AEx ia IIC; Class I, II, III, Div.1, Groups A, B, C, D, E, F, G Class I, Div.2, Groups A, B, C, D; Class II, Div.2, Groups F, G
	-05	EC type examin	nation Number Date	PTB 03.ATEX 2099 2016-04-19	II 2D Ex th IIIC T80°C Db IP66
	-07	JIS	Number Date Valid until	TC17330 2017-07-29 2020-07-28	Ex ia IIC T6
		EC type examin	nation Number Date	PTB 03.ATEX 2179 X 2013-09-17	II 3G Ex nA II T6; II 3G Ex ic IIC T6; II 3D Ex tc IIIC T80°C IP66
	80-	ERC Ex	Number Date Valid until	RU C-DE.08.B.00113 2013-11-15 2018-11-14	2Ex nA IIC T6/T5/T4 Gc X 2Ex ic IIC T6/T5/T4 Gc X 2Ex tc IIIC T80°C Dc X

Article code

Positione	r	Туре 3730-0	х	0	0	0	0	0	0	0	0	х	0	0	х	0	х	х
Explosion protection																		
Without	t		0															
ATEX:	II 2G Ex ia IIC T6 Gb; II 2D Ex ia IIIC T80°C Db		1															
FM/CS/	A: Class I, Zone O AEx ia IIC; Class I, II, III, Div.1, Groups A- Class I, Div.2, Groups A-D; Class II, Div.2, Groups F, G/ Ex ia IIC T6; Class I, Zone O; Class II, Groups E-G; Ex nA II T6; Class I, Zone 2; Class II, Div. 2, Groups E-G	G;	3															
ATEX:	II 2G Ex tb IIIC T80°C Db IP66		5															
JIS:	Ex ia IIC T6		7															
ATEX:	II 3G Ex nA II T6; II 3G Ex ic IIC T6; II 3D Ex tc IIIC T80°C	C IP66	8															
Housing	Housing material																	
Alumir	num											0						
Stainle	ss steel 1.4581											1	_					
Special o	applications																	
Withou	ut														0			
Compo	atible with paint														1			
Exhaus	st air with ¼ NPT connection, back of housing sealed														2			
Special v	rersion																	
Withou	ut																0	0
EAC Ex	: 1Ex ia IIC T6/T5/T4 Gb X; Ex tb IIIC T80°C Db X		i														1	4
EAC Ex	c: 2Ex nA IIC T6 /T5/T4 Gc X; 2Ex ic IIC T6/T5/T4 Gc X; 2Ex tc IIIC T80°C Dc X		8														2	0
Attach	ment according to VDI/VDE 3747 with interface														6			
Attach	ment according to VDI/VDE 3747 prepared for interface														7			

Mounting the positioner

The Type 3730 Electropneumatic Positioner can be attached directly to the Type 3277 Actuator over a connection block.

In actuators with fail-safe action "actuator stem extends" and Type 3277-5 Actuator (120 cm²), the signal pressure is routed over an internal hole in the actuator yoke to the actuator.

In actuators with fail-safe action "actuator stem retracts" and in actuators with effective diaphragm areas of 175 cm² or larger, the signal pressure is routed to the actuator over ready-made external piping.

Using the appropriate bracket, the positioner can also be attached according to IEC 60534-6-1 (NAMUR recommendation). The positioner can be mounted on either side of the control valve.

A special version of the positioner allows it to be attached according to VDI/VDE 3847. This type of attachment allows the positioner to be replaced quickly while the process is running by blocking the air in the actuator. The positioner can be attached directly to the Type 3277 Actuator using an adapter bracket or adapter block. Alternatively, it can be attached to the NAMUR rib of a control valve using an additional NAMUR connection block.

Ordering text

Type 3730-0x Positioner

- Without pneumatic connecting rail (only when directly attached to Type 3277)
- With pneumatic connecting rail ISO 228/1-G ¼
- With pneumatic connecting rail 1/4-18 NPT
- Without/with pressure gauge up to max. 6 bar
- Attachment to Type 3277 Actuator (120 to 750 cm²)
- Attachment acc. to IEC 60534-6-1 (NAMUR)
 Travel: ... mm, if applicable, stem diameter: ... mm
- Attachment according to VDI/VDE 3847
 Valve travel: ... mm, if applicable, rod diameter: ... mm
- Adapter M20x1.5 to ½ NPT
- Metal cable gland

Specifications subject to change without notice

