Bourdon Tube Pressure Gauges Test Gauge with ± 0.25% Accuracy Type 312.20

WIKA Datasheet 312.20

Applications

- Calibration and testing laboratories
- Suitable for gaseous or liquid media that will not obstruct the pressure system or corrode copper alloy wetted parts

Special features

- High accuracy (± 0.25% of span)
- Mirrored band on dial
- Knife edge adjustable pointer
- Pressure ranges up to 10,000 psi

Standard Features

Design

ASME B40.100 & EN 837-1

Sizes

6" (160 mm)

Accuracy class

± 0.25% of span (ASME B40.100 Grade 3A)

Ranges (all ranges not stocked)
Vacuum / Compound to 200 psi
Pressure from 10 psi to 10,000 psi

or other equivalent units of pressure or vacuum

Working pressure

Steady: full scale value
Fluctuating: 0.9 x full scale value
Short time: 1.3 x full scale value

Operating temperature

Ambient: -40°F to +140°F (-40°C to +60°C) Medium: +180°F (+80°C) maximum

Temperature error

Additional error when temperature changes from reference temperature of 68°F (20°C) $\pm 0.4\%$ for every 18°F (10°C) rising or falling. Percentage of span.

Weather protection

Weather resistant (NEMA 3 / IP 54)



Bourdon Tube Pressure Gauge Model 312.20

Pressure connection

Material: copper alloy

Lower mount (LM) or lower back mount (LBM) 1/4" NPT or 1/2" NPT limited to wrench flat area

Bourdon tube

≤1,000 PSI: copper alloy, C-type, soft soldered ≥1,500 PSI: 316 stainless steel, helical type, brazed

Movement

Copper alloy with nickel-alloy wearable parts

Dial

White aluminum with black lettering and mirrored band

Pointer

Black aluminum with knife edge, friction adjustable

Case

304 stainless steel with Buna-N vent plug and polished stainless steel bayonet ring.

Window

Laminated safety glass

Window gasket

Buna-N


Standard scale

psi



Optional extras

- Brass restrictor
- Stainless steel front or rear flange
- NIST calibration certificate
- Solid front safety case (Type 312.30)
- Special connections limited to wrench flat area
- Custom dial layout
- Other pressure scales available bar, kPa, MPa, kg/cm² and dual scales

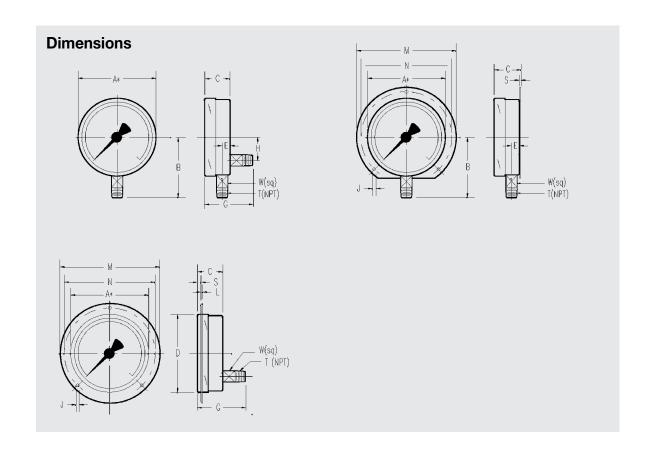

Size															
		Α	В	C ¹	D	Е	G	Н			М	N		W	Weight
6"	mm	160	116	49.5	161	15.5	81	50	5.8	3	196	178		22	
	in	6.0	4.57	1.95	6.34	0.61	3.19	1.97	0.23	0.12	7.72	7.0	1/2"	0.86	2.42 lb

 $^{^{1}\,\}text{For ranges}\,{\leq}\,60$ psi and ${\geq}\,1,\!500$ psi, C dimension changes to 2.58" (65.5 mm)

Recommended panel cutout is dimension D + 1.5 mm

Page 2 of 2

Ordering information

Pressure gauge model / Nominal size / Scale range / Size of connection / Optional extras required Specifications and dimensions given in this leaflet represent the state of engineering at the time of printing. Modifications may take place and materials specified may be replaced by others without prior notice.

WIKA Datasheet 312.20 07/2008



WIKA Instrument Corporation

1000 Wiegand Boulevard Lawrenceville, GA 30043 Tel (770) 513-8200 Toll-free 1-888-WIKA-USA Fax (770) 338-5118 E-Mail info@wika.com

www.wika.com